








Table 1: Valve Cross-reference

(Please refer to individual product description for dimensions)

Line #	Part No.		For			Note
			Faucets	With Handles	of Batch *	
↓ Separate Hot and Cold Valves ↓						
1	5V-1200					For 5V-3012-D1 (Diverter)
2	5V-1252-1C (cold) 5V-1252-1H (hot)		5131, 5133, 5525, 5629, 5638, 5640, 5641, 5642, 5726, 5727, 57-026	All, except 63, 68, 69		
3	5V-1252-2C (cold) 5V-1252-2H (hot)		5629 5638 5640 5641 5642	Only for 63, 69		
4	5V-1252-3C (cold) 5V-1252-3H (hot)		5669 5729 5769		SH-374 SH-47E	See 5V-1258-2 for mfg batch SH-26G.
5	5V-1255-1C (cold) 5V-1255-1H (hot)		5709 Body jet			
6	5V-1258-1C (cold) 5V-1258-1H (hot)		All dual handle faucets, plus 57-026	All, except 63, 69		✓

Line #	Part No.		For			Note
			Faucets	With Handles	of Batch *	
7	5V-1258-2C (cold) 5V-1258-2H (hot)		5669 5729 5769		SH-26G	See 5V-1252-3 for other mfg batches.
8	5V-1260-1C (cold) 5V-1260-1H (hot)		5732		SH-26G	
9	5V-120B (cold) rubber washer, ø15.5x3mm					For Cold valves: 5V-1252-2C 5V-1252-3C 5V-1258-1C
10	5V-120R (hot) rubber washer, ø15.5x3mm					For Hot valves: 5V-1252-2H 5V-1252-3H 5V-1258-1H
11	5V-121B (cold) rubber washer, ø16x6mm					For Cold valves: 5V-1252-1C 5V-1255-1C 5V-1258-2C 5V-1260-1C
12	5V-121R (hot) rubber washer, ø16x6mm					For Hot valves: 5V-1252-1H 5V-1255-1H 5V-1258-2H 5V-1260-1H
↓ Mixed Hot and Cold Valves ↓						
20	5V-4031-1		5451, 5453, 5502, 5507, 5508 5611, 5634, 5718	All		









Line #	Part No.		For			Note
			Faucets	With Handles	of Batch *	
21	5V-4043-1		5521 5608	All		
22	5V-4044-1		5709	All		Pressure balance.
Note: * Batch no. can be found on faucets.						

Table 2: Cartridge & Diverter Cross-reference
 (Please refer to individual product description for dimensions)

Line #	Part No.	Image	Valve Used	For		Note
				Faucets	of Batch *	
↓ Separate Hot & Cold valve Assemblies ↓						
30	5V-2612-0C (cold) 5V-2612-0H (hot)		5V-1252-3C (cold) 5V-1252-3H (hot)	5229 5669	SH-26G, SH-374	
31	5V-2612-1C (cold) 5V-2612-1H (hot)		5V-1258-1C (cold) 5V-1258-1H (hot)	All wide-spread Vanity faucets (5229, 5240, 5253, 5669, etc)	SH-571, YL-572, and after	✓
32	5V-3012-2C (cold) 5V-3012-2H (hot)		5V-1258-2C (cold) 5V-1258-2H (hot)	All wide-spread Tub faucets (5769, 5729)	SH-26G, SH-374	Subst: 5V-3112-2.
33	5V-3112-2C (cold) 5V-3112-2H (hot)		5V-1258-1C (cold) 5V-1258-1H (hot)	All other wide-spread Tub fillers (5729, 5740, 5753, etc)	SH-571, YL-572, and more, except SH-47E	✓
↓ Diverter Assemblies ↓						
40	5V-2612-D1 (Diverter)		None	5769	SH-47E	Mounts at spout.

Line #	Part No.		Valve Used	For		Note
				Faucets	of Batch *	
41	5V-2612-D2 (Diverter)		None	All wide – spread Tub faucets (5729, 5740, 5753, etc)	SH-571, YL-572, and others except SH-47E	Auto Off. ✓
42	5V-3012-D1 (Diverter)		5V-1200	All wide-spread Tub faucets	SH-26G	Manual On/Off. If unavailable, select 5V-2612-D2 + push knob kit.
* Note: Batch no. can be found on faucets.						